





1. Place orange tape on 1.5" coupler over bump.



2. Place black tape on 1.5" coupler directly opposite orange tape.

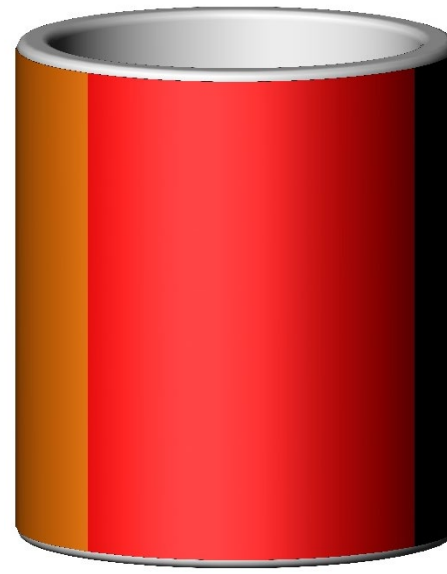

3. Place red tape on 1.5" coupler directly next to orange tape as shown. It will overlap black tape some.

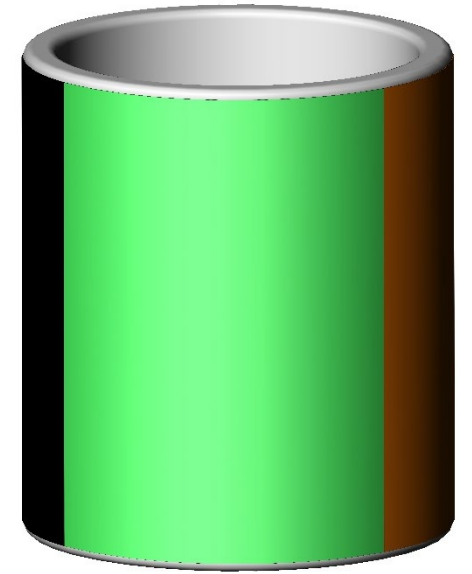

4. Place green tape on 1.5" coupler directly next to orange tape as shown. It will overlap black tape some.